




# LIGHTBAR SPECIFICATION SHEET

PART No: 16043

DESCRIPTION : SOLEX47MCS-SPEAKER-C126751

Cable : Quick Disconnect with 22' Cable  
 Mounting Kit : Metal Mounting kit LX Kit

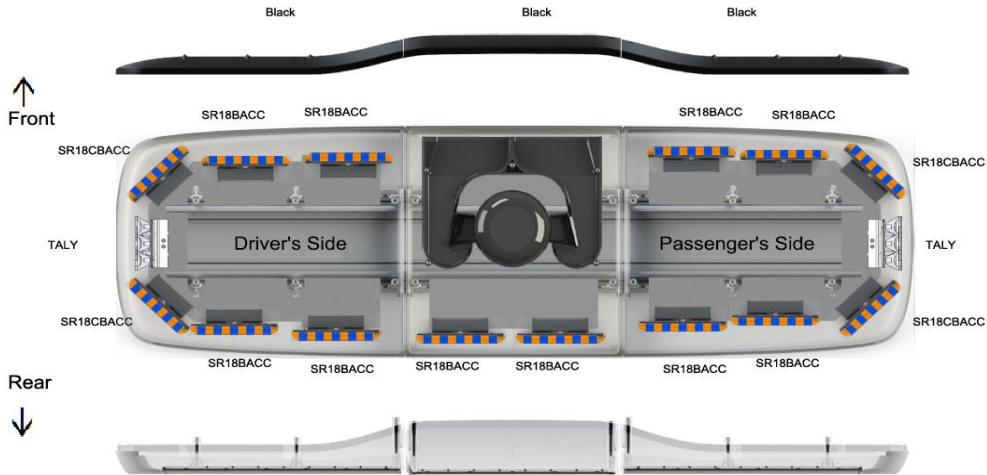

Wire Color	Function	Notes
GRN/BLK	Level 1 (R65)	
WHT/BLK	Level 2 (Amber Full R65)	
BLU/BLK	<b>SPEAKER -</b>	
GRN/WHT	<b>SPEAKER +</b>	
WHT	Arrowstick Flash	
BLU/WHT	Alley Light Flash	
BLK	<b>SPEAKER +</b>	
BLK/WHT	Alley Light Left	
RED	Arrowstick Left	
RED/WHT	Alley Light Right	
RED/BLK	Level 3 (Full Blue)	
ORG/BLK	Takedown Lights Steady Burn	
BLK/RED	<b>SPEAKER -</b>	
GRN	Cruise Lights	
ORG	Arrowstick Right	
BLU	Lightbar DIM	
RED 1,5mm <sup>3</sup>	Positive Lightbar	
RED 1,5mm <sup>3</sup>	Positive Lightbar	
RED 1,5mm <sup>3</sup>	Positive Lightbar	
BLACK 1,5mm <sup>2</sup>	Ground	
BLACK 1,5mm <sup>2</sup>	Ground	
BLACK 1,5mm <sup>2</sup>	Ground	
BLACK 1,5mm <sup>2</sup>	Ground	

Notes:

- L1 = Level 1 (R65)
- L2 = Level 2 ( Amber Full R65)
- L3 = Level 3 (Full blue cycle flash)
- all functions are positive inputs
- Dim function dims the complete lightbar